


Part IV: Plastic Dielectric Constant Measurement

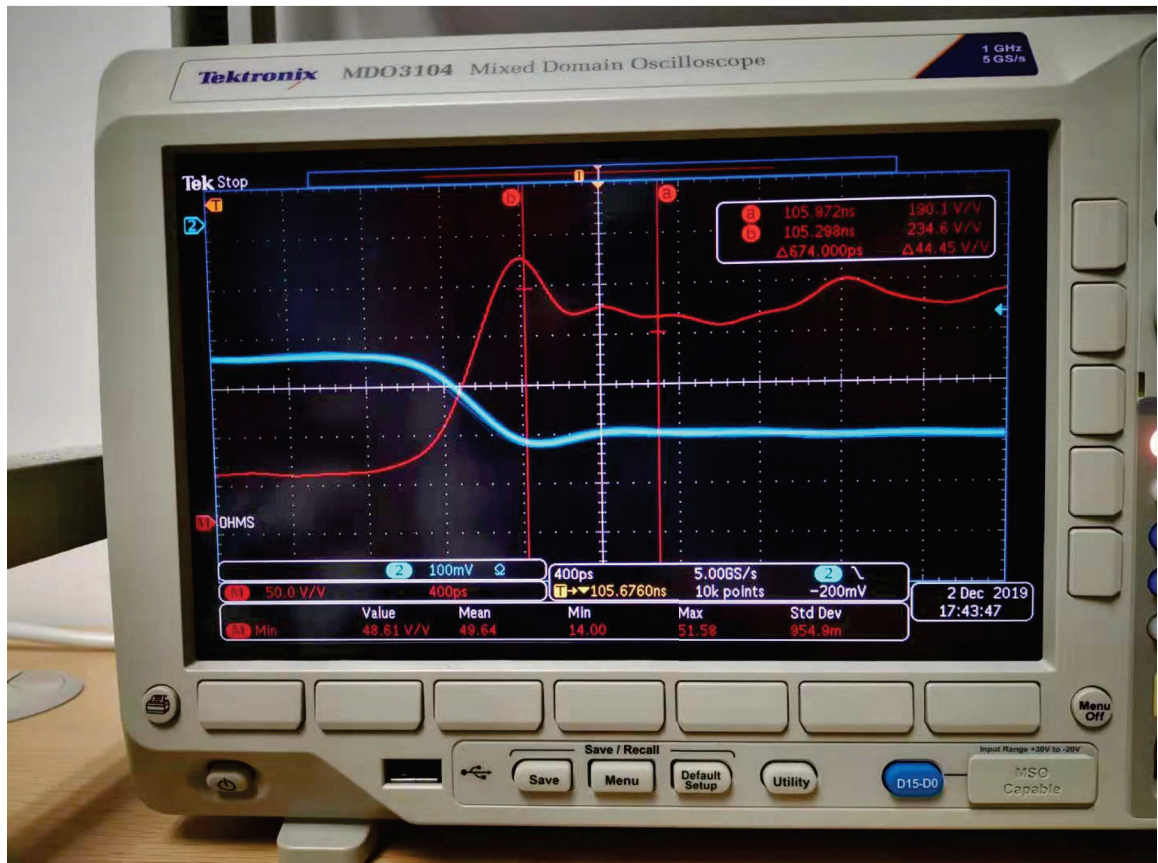

TDR result without DUT

The point at cursor "b" is the starting point for the round way trip of the falling edge.